Metering Guidelines

Latest Update to all specs can be found at SBEC.org

For the member's safety, wiring installation and material shall conform to the requirements of the NEC, TDLR and NESC. All Wiring Installations must also meet local guidelines, if applicable, set forth but the city, county, or other governing entity in the event these requirements are more stringent than SBEC specifications.

General Notes Applicable to All Specs

- 1. Weatherproof fittings are required for all connections.
- 2. The main electrical disconnect for each electrical service, if not mounted on an SBEC pole or on an approved rack, shall be unenclosed and installed on the exterior of the building or approved structure in a location approved by San Bernard Electric Cooperative
- 3. Meter assembly must remain unenclosed on the exterior of a structure.
- 4. Meter assembly cannot be mounted on a mobile home.
- 5. Any part of a meter rack or equipment rack shall be a minimum of 10 feet from SBEC poles or equipment and shall not impede access for maintenance to SBEC's poles or equipment.
- 6. SBEC poles must remain free of structures and private attachments other than the meter loop/meter loop riser assembly.
- 7. Meter loops or risers shall be installed on pole by SBEC.
- 8. All secondary connections are to be made by SBEC.
- 9. Neutral(s) must be insulated and may only be reduced by two sizes on residential applications. No reduction of the neutral(s) is allowed on commercial applications.
- 10. Each phase must be sized to accommodate the total main fuses or breakers installed
- 11. Electric service to fire pumps shall be served through a CT-metered service.
- 12. Where three phase is used to provide single-phase service to individual occupants, the load must be balanced between all three phases as equally as possible. This applies whether the single-phase services are individually metered or not.
- 13. For all jobs requiring excavation, including rack or underground, the individual or contractor performing the work shall call TEXAS811 for locating underground utilities before digging to SBEC equipment. No private utilities will be located.

Standby Generator Notes

- 1. Generators shall be placed at a minimum of 10' away from SBEC's pole(s) and/or equipment and outside of SBEC's easement.
- 2. Transfer switches may be on SBEC's pole, only if they are in place of a main panel. They may not be in addition to a panel.
- 3. Any transfer switch that serves as a main (first device past meter) must be service rated.
- 4. Generators must be connected to a dedicated transfer switch. Breaker interlocks are not acceptable.
- 5. Portable generators may be connected to an inlet through a transfer switch.
- 6. Transfer switches that plug into the meter base are not acceptable.
- 7. Emergency Stop buttons shall be installed at the transfer switch.

If you have questions about installing a generator email or call us at, generator questions@sbec.org, 979-865-3171.

The Member must make arrangements with SBEC for the disconnect. There will be a \$120.00 fee applied to the next monthly bill for the request to disconnect for a generator installation. Any additional trips will be assessed at the same rate.

Notes:

- Main disconnect panel may not be used as an electrical race way.
- 2. Line taps shall be made in the galvanized trough by the electrical contractor.
- 3. Weatherproof fittings required.
- 4. (2) disconnects could be substituted with (1) disconnect.
- 5. Wire shall be sized to total disconnect sizes.
- Neutral(s) may be reduced no more than two sizes on residential applications. No reduction of the neutral(s) is allowed on commercial applications.
- Member must contact SBEC to determine where the secondary conduit is to be run to the transformer. Conduit to be installed 36" to the side of transformer.
- SBEC will complete wiring into transformer. Member shall have 10' of additional wire for termination.
- 9. All secondary connections inside the transformer shall be made by SBEC.
- 10. SBEC to provide the CTs.
- 11. Meter assembly must remain unenclosed on exterior of structure.
- 12. Generator shall be a minimum distance of 10' away from SBEC's pole and/or equipment.

exas Registered Engineering Firm F-2664

916 Southwest Parkway East

College Station, TX 77840

(979) 764-8356

Back of Transformer - Transformer Transformer Opening Side of Side of Transformer Transformer SECONDARY (SECONDARY MEMBER CONDUIT { MEMBER CONDUIT MEMBER CONDUIT SHALL STOP 36" FROM BOX. MEMBER SHALL PROVIDE SCH. 40 PVC CONDUIT ELBOW WITH A 24" SWEEP AND 10' OF ADDITIONAL Front of Transformer CABLE RUN MAX. ONE CONDUIT PER MEMBER UNLESS WRITTEN APPROVAL BY SBEC PERSONNEL.

Single Phase Transformer Layout

WIRING INSTALLATIONS MUST MEET LOCAL GUIDELINES, IF APPLICABLE, SET FORTH BY CITY, COUNTY, OR OTHER GOVERNING ENTITY IN THE EVENT THESE REQUIREMENTS ARE MORE STRINGENT THAN SBEC SPECIFICATIONS.

3Ø >200 AMPS UNDERGROUND SERVICE WITH DISCONNECT

ON RACK OR BUILDING WITH STANDBY GENERATOR SYSTEM.

None


1 or 1

2/13/2025

SB.I

SBEC-7A

REVISIONS

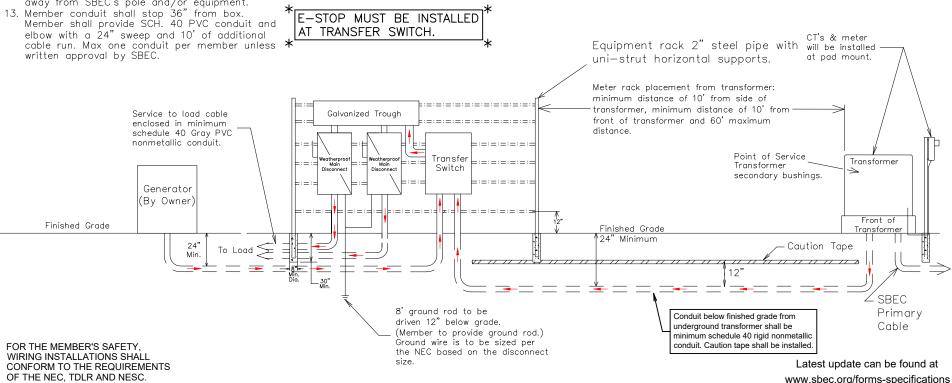

SAN BERNARD ELECTRIC COOPERATIVE

(SBEC)

309 W. MAIN STREET

BELLVILLE, TX 77418

(979) 865-3171

DATE

San Bernard

Cooperative, Inc.

Electric

SBEC Table (SC1)

Residential Service Entrance Conductors

All Conductor ratings are based on 75°C (167°F) temperature rating

Main Service Amperage	Current Conductor		Neutral Conductor		Grounded Conductor (Bonding Jumpers)	Grounding Electrode Conductor
	Copper	Aluminum	Copper	Aluminum	Copper	Copper
	Wire Size/ Amps	Wire Size/ Amps	Wire Size/ Amps	Wire Size/ Amps	Wire Size/ Amps	
100	4	2	8	3	8	6
125	2	1/0	4	2	8	6
150	1	2/0	3	1	6	6
200	2/0	4/0	1	2/0	4	6
320	350	500	250	350	2	6
*Parallel Runs	2/0	3/0	1	1/0		
400	400	600	300	400	1/0	6
*Parallel Runs	3/0	4/0	1/0	2/0		

Note: Services larger than 200 AMP require a load analysis, Services larger than 400 AMP require a load analysis and one-line diagram.

SBEC Table (SC2)

Commercial Service Entrance Conductors

This includes large water wells and shops for business use

All Conductor ratings are based on 75°C (167°F) temperature rating

Main Service Amperage	Current Conductor		Neutral Conductor		Grounded Conductor (Bonding Jumpers)	Grounding Electrode Conductor
	Copper	Aluminum	Copper	Aluminum	Copper	Copper
	Wire Size/ Amps	Wire Size/ Amps	Wire Size/ Amps	Wire Size/ Amps	Wire Size/ Amps	
100	2	1/0	2	1/0	8	6
125	1	2/0	1	2/0	6	6
150	1/0	3/0	1/0	3/0	6	6
200	3/0	250	3/0	250	2	6
320	350	500	350	500	2	6
*Parallel Runs	2/0	3/0	2/0	3/0		
400	500	750	500	750	- 1/0	6
*Parallel Runs	3/0	250	3/0	250		

Note: Services larger than 200 AMP require a load analysis, Services larger than 400 AMP require a load analysis and one-line diagram.

Note: The neutral conductor is not allowed to be downsized in this installation.

^{*} Parallel conductor size is calculated using separate conduits. If single conduit is used the conductor must be derated by 80% and a larger conductor size will be required.

^{*} Parallel conductor size is calculated using separate conduits. If single conduit is used the conductor must be derated by 80% and a larger conductor size will be required.